


## GENERAL PROCEDURES

### Parking Brake Cable Adjustment


#### Hand-Operated (Floor Shift)

1. Adjust the parking brake shoes as described in this section.
2. Fully release the park brake lever. Re-apply lever one click only.
3. Tighten cable adjuster nut (under vehicle) until minimum drag is first felt on the rear wheels when rotating wheels by hand.
4. Apply the lever a further 3 clicks.
5. Check that the rear wheels cannot be rotated by hand.
6. Fully release the park brake lever and check rear wheels are free to turn by hand.
7. Check operating levers at park brake are in the 'OFF' position and that there is minimum clearance only between levers and cable eye.

#### Sedan

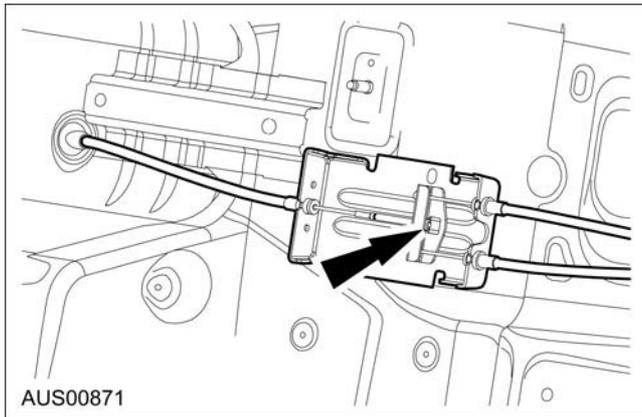

#### Ute/Wagon

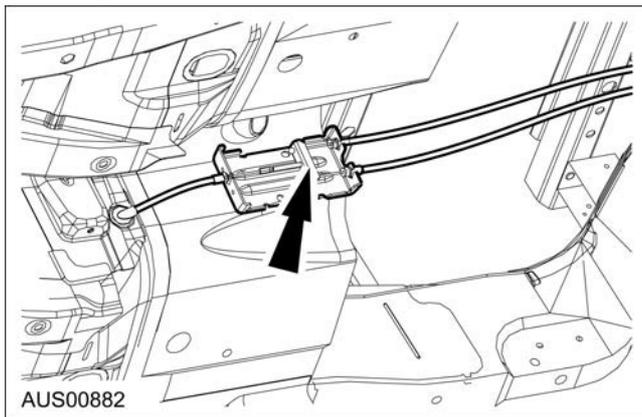


8. Check torque on p/clip tube mounting hardware.
9. Check P/B warning light operates by first click.
10. Check P/B returns to floor of it's own accord when in OFF position.

### Parking Brake Shoe Adjustment

#### Adjustment

1. Raise the vehicle and suitably support.
2. Remove rear wheel.
3. Remove service disc brake caliper from the mounting plate. Refer to Section 206-04.
4. Remove brake rotor by slowly turning and pulling outwards simultaneously keeping the brake rotor square with the axle. If the brake rotor jams whilst removing, do not force it off. Push the brake rotor back to its original position and attempt removal again.
5. Disconnect parking brake cable from the operating lever at the parking brake. Inspect any parts of doubtful strength or quality due to discolouration from heat or overstress, or are worn, they should be replaced.
6. Using a vernier caliper, measure shoe assembly diameter as close as practical to the centre of the lining material.

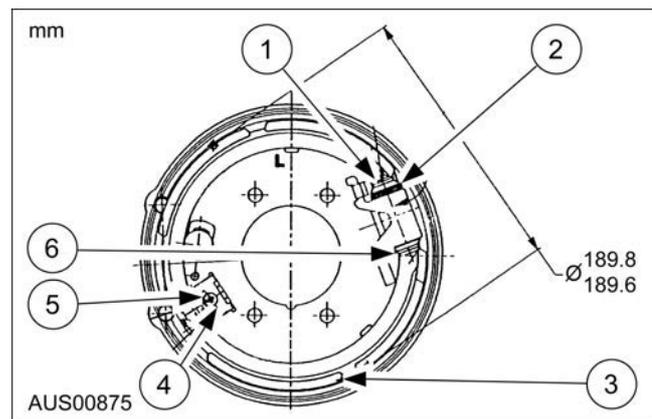

Item	Description
1	Adjusting Screen
2	Adjusting Nut
3	Shoe
4	Hold Down Spring
5	Screw
6	Tappet

7. Adjust shoe diameter to 189.6-189.8 mm by turning the adjuster nut clockwise to increase diameter.
8. Inspect brake rotor for wear and damage. Discard worn or damaged brake rotors.
9. Install brake rotor.
10. Install service disc brake caliper and torque mounting bolts to specification.
11. Install rear wheel.
12. Connect parking brake cable to the operating lever.