

## ARMING AND DISARMING ALARM

2

### Arming

Press the "DOOR" button on the keypad.

- The L.E.D. (red light) on the keypad will light up.
- All doors will automatically lock.
- The vehicle's indicator lights will flash twice and the siren will emit two chirps (if this feature is turned on).

### Disarming

Press the "DOOR" button on the keypad.

- The L.E.D. (red light) on the keypad will light up.
- All doors will automatically unlock.
- The vehicle's indicator lights will flash once and the siren will emit one chirp (if this feature is turned on).

**NOTE:** If the alarm is fitted with ultrasonic detectors (optional) then all of the windows must be completely closed and there must be no moving objects in the vehicle (to avoid false alarming).

**NOTE:** The driver and passenger doors must be locked prior to disarming the alarm with the keypad.

## STANDARD FEATURES

3

**Note:** These features cannot be optioned "OFF".

### Automatic Rearming

The alarm will automatically re-arm if the vehicle doors "Autolock" (refer vehicle Owners Manual on "Autolock" feature).

### Remote Boot Release Feature

If the remote boot release is used while the alarm is armed then the boot, shock detector, and ultrasonic detector (if fitted) is isolated to allow access to the boot and is re-armed after the boot is closed, providing FULL vehicle protection.

### Error Chirps

After arming the alarm using the keypad, should the bonnet or boot/tailgate have been left open, the alarm will emit a series of chirps 3 seconds after the normal arming chirps.

The vehicle's horn will emit a series of short beeps if any of the doors are not properly closed when locking (a standard vehicle feature).

When error chirps are emitted, disarm the alarm and check that all doors, bonnet and boot/tailgate are properly closed before re-arming the alarm.

### Reporting Chirps

If upon disarming the alarm the siren emits three chirps, the alarm is ready to report either an alarm condition which has happened or a low battery condition in the alarm.

To initiate the alarm condition report:

1. Enter the vehicle leaving the door open.
2. Insert the ignition key and turn to "Acc" position.
3. The vehicle's indicators flash to report the triggered sector.

**One flash:** Doors triggered.

**Two flashes:** Boot triggered.

**Three flashes:** Bonnet triggered.


**Four flashes:** Triggered by tampering of the alarm.

**Five flashes:** Shock detector triggered.

**Six flashes:** Ultrasonics triggered.

**Eight flashes:** Batteries in siren have a low charge.

**NOTE:** As a safety feature this function cannot be carried out unless a door is open. Closing the door before or during the reporting mode will cease the alarm condition report.

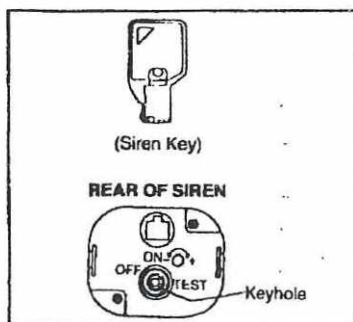

### Arm/Disarm Chirps (factory set "ON")

When the alarm is armed the siren emits two chirps. When the alarm is disarmed the siren emits one chirp.

The arming/disarming chirps can be turned on or off using the following procedure.

- Turn the siren key to the "Test" position. The siren will emit two chirps.

- Turn the ignition key to the "ACC" position and watch the vehicles indicators.
- On the seventh flash of the indicators turn the ignition "OFF". (The siren will emit seven confirmation chirps).
- Turning the ignition ON-OFF will toggle the selection. One chirp indicates chirps have been selected "OFF". Two chirps indicates chirps have been selected "ON".
- Return the siren key to the "ON" position to lock in the selection.

### Auto Arming (factory set "OFF")

The auto arming function will automatically arm the alarm without locking the doors. Two options are available.

### Option 1. Constant Auto Arming

The alarm will automatically arm without locking the doors 30 seconds after any one of the doors, boot or tailgate have been opened then closed. The vehicle's indicators will flash twice and the siren will emit two chirps (if selected "ON") when the alarm auto arms.

### Option 2. Ignition Key Controlled Auto Arming

The alarm will automatically arm without locking the doors 30 seconds after the ignition key has been turned to the "OFF" position and any one of the doors, boot or tailgate have been opened then closed. The vehicle's indicators will flash twice and the siren will emit two chirps (if selected "ON") when the alarm auto arms.


### Disarming the alarm when in auto alarmed state.

The vehicle must be locked using either the key or the keypad then unlocked using the "Door" button of the keypad.

### Auto arming can be turned on or off using the following procedure.

- Turn the siren key to the "Test" position. The siren will emit two chirps.
- Turn the ignition key to the "ACC" position and watch the vehicle's indicators.
- On the ninth flash of the indicators turn the ignition "OFF". (The siren will emit nine confirmation chirps).
- Turning the ignition ON-OFF will toggle to the following selections.
  - ⇒ One chirp indicates auto arming is "OFF".
  - ⇒ Two chirps indicates "Option 1" is selected.
  - ⇒ Three chirps indicates "Option 2" is selected.
- Return the siren key to the "ON" position to lock in the selection.

### DISABLING SYSTEM

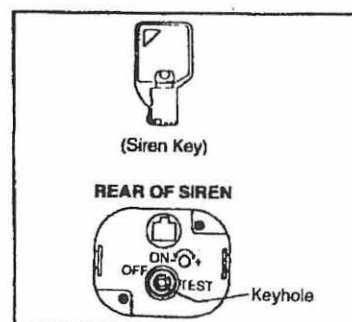

The alarm system can be disabled using the siren key supplied.

### To disable/enable

Turn the siren key in the keyhole located on the rear of the siren (under the bonnet of your vehicle) to the OFF or ON position to disable or enable the system.

### ULTRASONIC DETECTORS

The ultrasonic transducers are located on the top of the front door pillars and are designed to detect motion inside the vehicle. All windows must be closed and there must be no moving objects in the vehicle whilst the alarm is armed if ultrasonic detectors are fitted.