
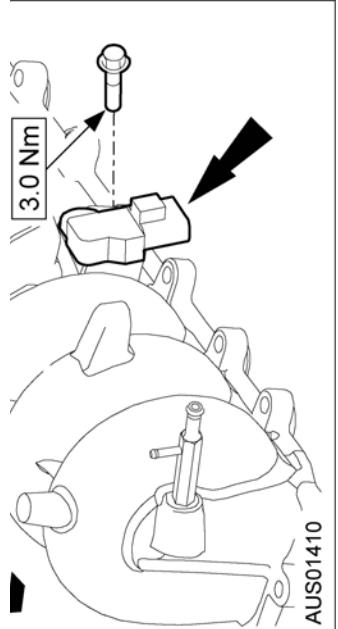


- WILLI A MIGLIORAMENTE GARANTIRE UN BUON FUNZIONAMENTO DEL SISTEMA DI ALIMENTAZIONE.
- petroleum jelly. Insert the injectors into the fuel rail and install retaining clips.
2. Ensure the intake manifold injector apertures and the fuel injector tips are clean, smear the injector sealing rings with a light coating of engine oil. DO NOT use petroleum jelly. Insert the injectors into the manifold and position the fuel rail, install the retaining screws and torque screws to 19Nm.
  3. Attach the injector wiring loom at the fuel rail and connect the injector clamp.
  4. Reconnect the fuel supply and return lines as tagged.
  5. Start and run engine. Check for any leaks. Rectify any faults found.
- 

**V8 Engine**

AUS01410

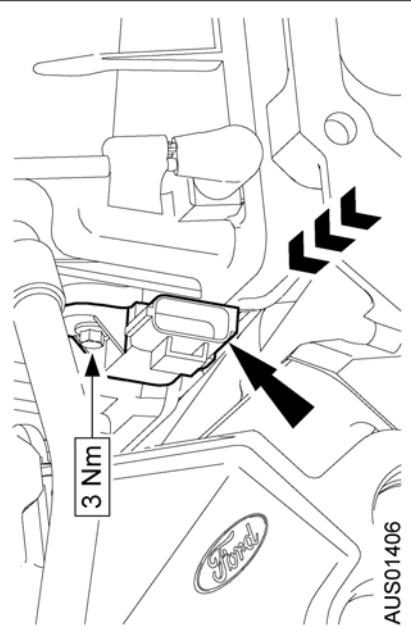

**V8 Engine**

AUS01406